

DMX CHANNELS

MODE 13 Ch	MODE 16 Ch	FUNCTION	DMX Value
1	1	PAN 0~100%	000 - 255
2	2	PAN FINE 0~100%	000 - 255
3	3	TILT 0~100%	000 - 255
4	4	TILT FINE 0~100%	000 - 255
5	5	PAN/TILT SPEED Fast to slow	000 - 255
6	6	SPECIAL FUNCTION No Function Pan & Tilt Reset (Hold 3 second) No Function Zoom Reset (Hold 3 Seconds) No Function	000 - 049 050 - 099 100 - 149 150 - 199 200 - 255
7	7	DIMMER 0~100%	000 - 255
8	8	SHUTTER Shutter Closed No Function (Shutter Open) Strobe Effect (Slow to Fast) No Function (Shutter Open) Pulse - Effect in sequences No Function (Shutter Open) Random Strobe Effect (Slow to Fast) No Function (Shutter Open)	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
9	9	RED 0~100%	000 - 255
10	10	GREEN 0~100%	000 - 255
11	11	BLUE 0~100%	000 - 255
12	12	WHITE 0~100%	000 - 255
	13	COLOR FUNCTION No Function CTC Function Forward Spin	000 - 019 020 - 039 040 - 059

PIXIEWASH

MODE 13 Ch	MODE 16 Ch	FUNCTION	DMX Value
	13	Reverse Spin Continuos TBD	060 - 079 080 - 099 100 - 255
	14	COLOR Color Temperature Correction 2000K --> 3000K White 3200 K White 4200 K White 5600 K White 8000 K FORWARD SPIN Rainbow Effect (Slow to Fast) REVERSE SPIN Rainbow Effect (Slow to Fast) CONTINUOS Black Red Green Blue White Red=0; Green ->Up; Blue=Full; White=0 Red=0; Green =Full; Blue->Down; White=0 Red->Up; Green=Full; Blue=0; White=0 Red=Full; Green ->Down; Blue=0; White=0 Red=Full; Green=0; Blue->Up; White=0 Red->Down; Green=0; Blue=Full; White=0	000 - 223 224 - 231 232 - 239 240 - 247 248 - 255 000 - 255 000 - 255 000 - 000 001 - 001 002 - 002 003 - 003 004 - 004 005 - 046 047 - 088 089 - 130 131 - 172 173 - 214 215 - 255
13	15	ZOOM 0~100%	000 - 255
	16	DIMMER MODE Preset Dimmer Speed from Display Menu Dimmer Speed Mode Off Dimmer Speed Mode 1 (Fast Speed) Dimmer Speed Mode 2 (Middle Speed) Dimmer Speed Mode 3 (Slow Speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255